

Feature	Sub-feature	Firmware			
		DD-WRT	Tomato	OpenWRT	Netgear
	Static LAN connectivity	Pass	Pass	Pass	Pass
LAN Connectivity	Dynamic LAN connectivity	Pass	Pass	Pass	Pass
	LAN<->WLAN	Pass	Pass	Pass	Pass
	Static WAN connectivity	Pass	Pass	Pass	Pass
WAN connectivity	Dynamic WAN connectivity	Pass	Pass	Pass	Pass
	PPPoE WAN connectivity	Not tested	Not tested	Not tested	Not tested
	WEP	Pass	Pass	Pass	Pass
Wireless	WPA-PSK(TKIP)	Pass	Fail	Fail	Pass
	WPA2-PSK(AES)	Pass	Fail	Fail	Pass
	WPA-Enterprise (RADIUS)	Pass	Fail	Fail	Not tested
	Upgrade from Default NETGEAR FW	Pass	Pass	Pass	Pass
	Upgrade from Default NETGEAR FW	Pass	Pass	Pass	Pass
	From OpenWRT	Pass	Pass	Pass	Pass
	To OpenWRT	Pass	Pass	Pass	Pass
Firmware Upgrade	From DD-WRT	Pass	Pass	Pass	Pass
	To DD-WRT	Pass	Pass	Pass	Pass
	From Tomato	Pass	Pass	Pass	Pass
	To Tomato	Pass	Pass	Pass	Pass
Factory Reset	Soft factory reset	Pass	Not in GUI	Not in GUI	Not in GUI
	Hard factory reset	Pass	Pass	Pass	Pass
	Detection of Mass storage de	Pass	Pass	Pass	Pass

Sheet1

	Automount of Mass storage d	Pass	Pass	Pass	Pass
NAS	Access NAS using FTP	Pass	Pass	Pass	Pass
	Access NAS using SSH	Pass	Fail	Fail	Fail(Connect ion Refused)
	Access NAS using SAMBA	Not Supported	Not Supported	Not Supported	Pass
Reboot	Reboot through GUI	Pass	Pass	Pass	Not given in GUI